

Product Update Bulletin # 6440

Valve Communication and Control



March 28, 2013

All Axiom AX models

Design Change Notification

In preparation for the launch of a higher flow rate solenoid valve option for the Axiom AX platform later this year, we have made a design change to the SR/DA selection plug configuration.

The Axiom AX was initially designed with the SR/DA plug installed and included with the Axiom housing. We have changed the design and will be shipping the plug installed in the mounting/manifold plate as shown below.

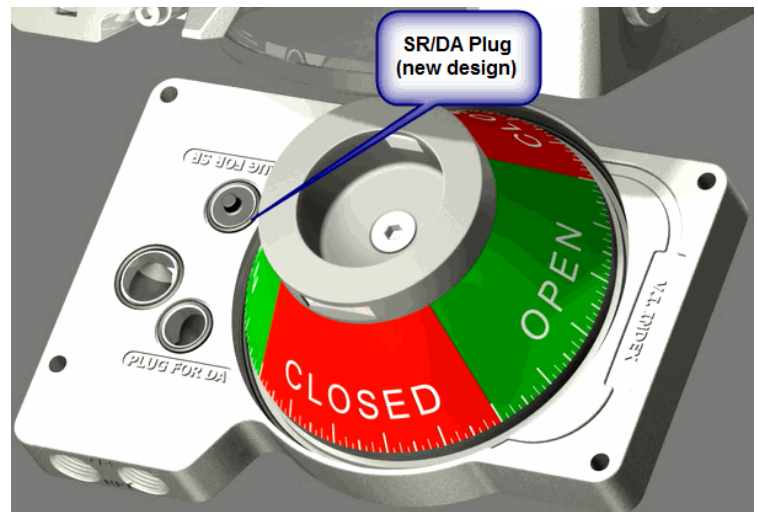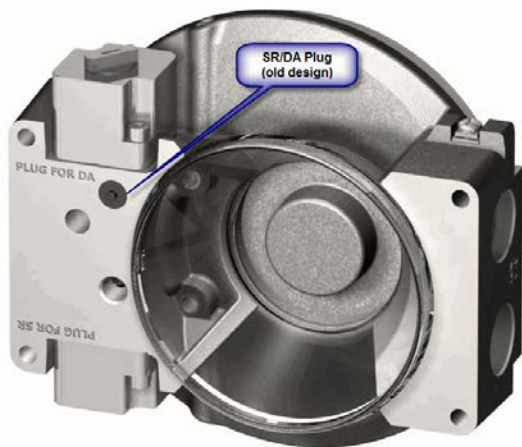


At this time we are in the transition phase, not all kits and units have been fully converted.

If you find during installation that you have a plug in both the Axiom unit and the manifold mounting plate, just remove the plug from the Axiom unit, it is not needed.

This change only applies to the Axiom AX. The Axiom AMI is not affected.

Please let me know if you have any questions or comments

Best Regards,

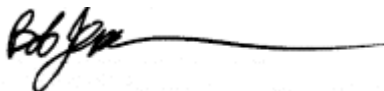

Bob Jenson
Director of Technical Solutions
StoneL
Phone: (218) 737-0732
e-mail: bjenson@stonel.com